



BLENDER



x 3



 
x 2





1



2

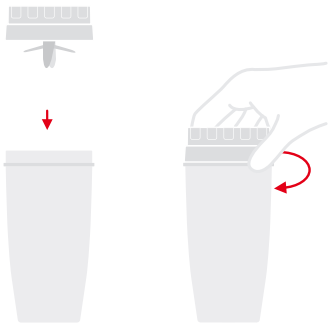

3

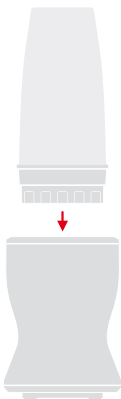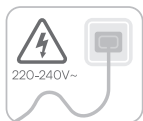  

4



 
<2min




OFF




5

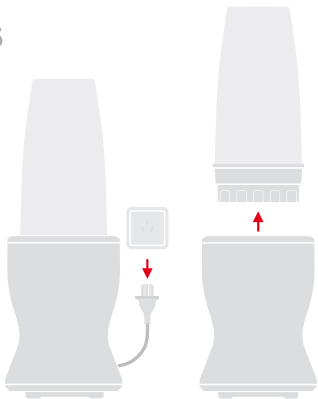


6

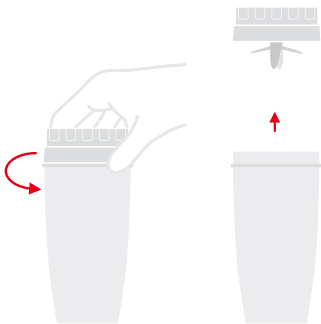 

7

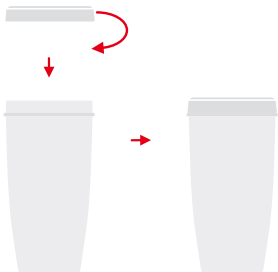 

OR

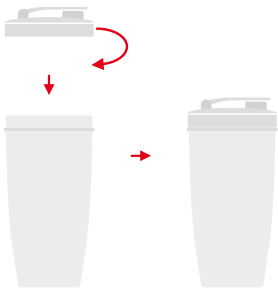 

IMPORTANT SAFEGUARDS

- Read these instructions carefully before use.
- Before using, check that the voltage indicated on the appliance corresponds with the voltage of your electrical outlet.
- This appliance is intended for household use only. Do not use it for any purpose other than its intended use.
- This appliance is not to be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure they do not play with the appliance. Do not allow children to use the blender without supervision.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has malfunctioned, been dropped, or been damaged in any way. Return the appliance to an authorised service facility for examination or repair.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid a hazard.
- Always disconnect the appliance from the power supply when not in use, before assembling or disassembling parts, and before cleaning. Remove the plug from the outlet by grasping the plug, not the cord.
- Do not let the cord hang over hot surfaces or over the edge of a table or counter.

- Do not leave the appliance unattended while in use.
- Always use the appliance on a secure, dry, level surface.
- Never place the appliance on or near a hot gas or electric burner, or in contact with a heated appliance.
- Do not use the appliance outdoors.
- To protect against the risk of electrical shock, do not immerse the motor unit in water or other liquids.
- Avoid contact with moving parts. Keep hands and utensils out of the cup while the blender is in operation to reduce the risk of injury.
- The blades are sharp. Handle with care.
- Wait until the blades have completely stopped before removing the cup from the motor unit.
- To reduce the risk of injury, never place the blade assembly on the motor unit without the cup properly attached.
- Do not blend liquids exceeding 40°C as hot liquid may be ejected from the appliance due to sudden steaming.
- The use of attachments not recommended by the manufacturer may cause fire, electric shock, or injury.
- If any problem is encountered during use, do not disassemble the motor unit. There are no user-serviceable parts inside. Contact an authorised service facility for examination and repair.
- Save these instructions.

CLEANING & MAINTENANCE

- The Auto Clean function allows for quick cleaning of the blender and blade assembly. Pour a small amount of warm soapy water into the cup, place the cup onto the motor unit and secure it, then run the appliance for a few seconds. Remove the cup and rinse under running water.
- Wipe the outer surface of the motor unit with a damp cloth. Do not use abrasive cleaners.
- Never immerse the motor unit in water.
- Dry all parts before reassembling.
- The blade assembly can be detached from the cup by turning anticlockwise. Use care when handling the blade assembly as the blades are sharp.
- The lid is dishwasher safe, but the temperature must not exceed 70°C.

BEFORE USING FOR THE FIRST TIME

- Unpack the appliance and place all parts on a level surface.
- Wash the cups, lids, and blade assembly in warm soapy water, rinse, and dry.
- Never immerse the motor unit in water.
- **CAUTION:** The blades are very sharp. Handle with great care.

USING YOUR BLENDER

Assembly

Before assembling, ensure the power cord is unplugged from the outlet. To assemble: place the blade assembly on a flat surface. Place the cup onto the blade assembly, ensuring the blades pass through the opening of the cup. Turn the cup clockwise to lock. To disassemble, turn the cup anticlockwise to detach it from the blade assembly.

Operation

- Ensure the cup is not on the motor unit before connecting the power cord to the outlet.
- Place the assembled cup onto the motor unit.
- Push the cup down and twist clockwise to start the motor. The motor will run as long as the cup is held in position.
- Twist anticlockwise to stop the motor.
- Do not blend liquids over 40°C or run the appliance empty.
- Do not exceed 2 minutes of continuous use. Allow a minimum of 1 minute rest between cycles.
- Wait until the blades have completely stopped before removing the cup from the motor unit.

SPECIFICATIONS & FEATURES

- Model: BLT1022-GS
- Spec Item: # 17103
- Input: 220-240V~, 50-60Hz
- Power: 300W

WARRANTY & SERVICE

12 MONTH LIMITED WARRANTY

Statutory Rights

For Australian consumers, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand consumers, our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This warranty is in addition to and does not limit your statutory rights and remedies under New Zealand law.

Warranty Details

The warranty commences on the date of purchase and expires at the end of the 12-month period. If a defect arises due to faulty materials or workmanship during the warranty period, our remedy will depend on the nature of the failure. For failures that do not amount to a major failure, we will repair or replace the product at our discretion, free of charge. For major failures, you are entitled to choose a replacement or a refund. To make a claim, you must provide a proof of purchase showing the date and place of purchase.

Warranty Conditions

- The appliance has not been operated with a damaged plug or cord, and has not been dropped, damaged, or immersed in water.

- The product has not been misused, improperly handled, disassembled, modified or repaired by an unauthorised person.
- The product has not been used for trade, professional or hire purposes.

Customer Costs

For valid claims covered under this warranty and applicable consumer protection laws, we will bear or reimburse the reasonable freight costs associated with returning the product.

However, if upon inspection the product is found to have user-induced damage or faults not covered by this warranty, you will be responsible for bearing all associated freight and transport costs.

Who is Covered

This voluntary warranty applies only to the original purchaser who purchased the product from an authorised retailer and is not transferable. Proof of purchase is required. However, this does not affect any statutory rights available to a person who receives the product as a gift under the Australian Consumer Law or the New Zealand Consumer Guarantees Act.

What is Not Covered

- Accessories supplied with the product.
- Components subject to normal wear and tear.
- Damage caused by misuse, improper handling, or unauthorised repair.
- Accidental damage.
- Damage caused by use not in accordance with instructions or the rating plate.
- Use of non-genuine Octopus parts or accessories.

How to Make a Warranty Claim

The quickest way to make a claim is to return the product, along with your proof of purchase,

to the original place of purchase for a replacement or refund (where applicable). Alternatively, you can contact us directly to make a claim under this warranty:

Australia:

Company Name: ZURU PTY LIMITED.

Business Address: Level 6, 500 Collins Street, Melbourne, VIC 3000, Australia.

Phone Number: 1800 324 892

New Zealand:

Company Name: ZURU NEW ZEALAND LIMITED.

Business Address: Level 4, Building A, 167 Victoria Street West, Auckland Central, Auckland, 1010, New Zealand.

Phone Number: 0800 587 055

Contact Us

hello@octopushome.com