 


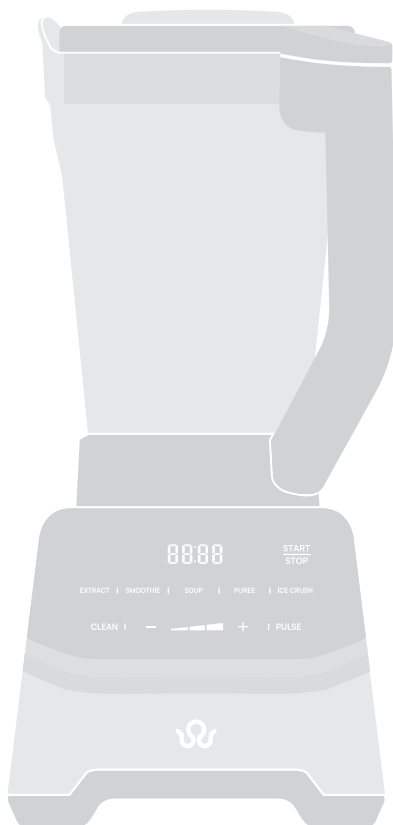

COUNTERTOP BLENDER

CONTENTS

- 1. Important Safety Instructions 1
- 2. Before Using For The First Time 2
- 3. Know Your Blender 2
- 4. Using Your Blender 6
- 5. Disposal 7
- 6. Recipes 8
- 7. Cleaning & Maintenance 8
- 8. Specifications & Features 9
- 9. Warranty & Service 9

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions carefully before use.
- Before using, check that the voltage indicated on the appliance corresponds with the voltage of your electrical outlet.
- This appliance is intended for household use only. Do not use it for any purpose other than its intended use.
- This appliance is not to be used by children. Keep the appliance and its cord out of reach of children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has malfunctioned, been dropped, or been damaged in any way. Return the appliance to an authorised service facility for examination or repair.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly authorised persons to avoid a hazard.
- Always disconnect the appliance from the power supply when not in use, before assembling or disassembling parts, and before cleaning. Remove the plug from the outlet by grasping the plug, not the cord.
- Do not let the cord hang over hot surfaces or over the edge of a table or counter.
- Never place the appliance on or near a hot gas or electric burner, or in contact with a heated appliance.
- Do not use the appliance outdoors.
- Do not leave the appliance unattended while in use.
- To protect against the risk of electrical shock, do not immerse the motor unit or power cord in water or other liquids.
- Keep hands and utensils out of the jar while the blender is in operation to reduce the risk of injury.
- Do not place foreign objects such as spoons, forks, knives, or the measuring cup in the jar. This may damage the blades and other components, and may cause injury.
- The blades are sharp. Handle with care when assembling, emptying the jar, and cleaning.
- Always operate the blender with the lid securely in place.
- Do not open the lid while the blades are still moving.
- Never run the appliance empty.
- Use caution when blending hot liquids. Hot liquid may be ejected from the appliance due to sudden steaming. Take care when emptying hot soup from the jar.
- If scraping is necessary, switch the appliance off and unplug it from the outlet. Use a rubber spatula only.
- The use of attachments not recommended by the manufacturer may cause fire, electric shock, or injury.
- Never put non-food items into the jar.
- If any problem is encountered during use, do not disassemble the motor unit. There are no user-serviceable parts inside. Contact an authorised service facility for examination and repair.
- Save these instructions.

BEFORE USING FOR THE FIRST TIME

- Unpack the appliance and place all parts on a level surface.
- Wash the jar, measuring cup, and jar lid in warm soapy water, rinse, and dry.
- Never immerse the motor unit in water.
- **CAUTION:** The blades are very sharp. Handle with great care.

KNOW YOUR BLENDER

Parts Overview

(Refer to the diagrams on page 3 for component identification.)

Control Panel

The control panel features the following buttons:



EXTRACT / SMOOTHIE / SOUP / PUREE / ICE CRUSH — Select a program mode. Each mode runs automatically for a preset duration.

CLEAN — Runs an automatic cleaning cycle.

PULSE — Blends at maximum speed for as long as the button is held.

+ / - — Adjust the speed manually.

START / STOP — Start or stop the selected program.

The timer display shows the elapsed blending time during operation.

Speed Indicator

The speed indicator on the control panel shows the current motor speed:



- 1 bar: low speed
- 2 bars: medium speed
- 3 bars: high speed
- Bars cycling (1 → 1+2 → 1+2+3): the motor is running at very low speed and may need to be increased



1




2

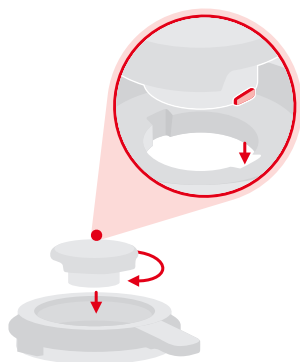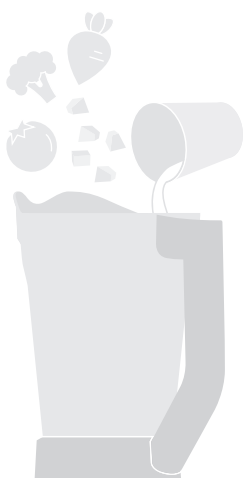



3



 
4

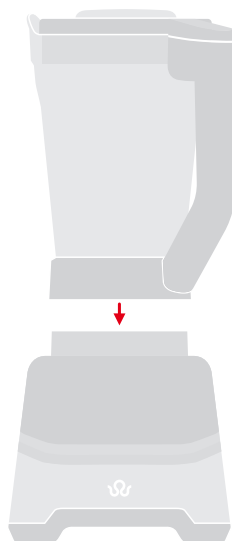


5

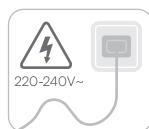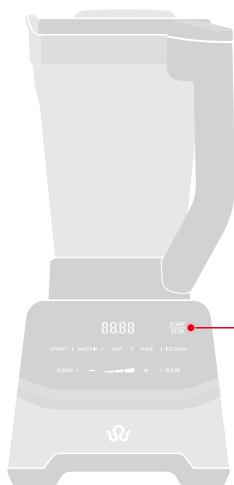  


6

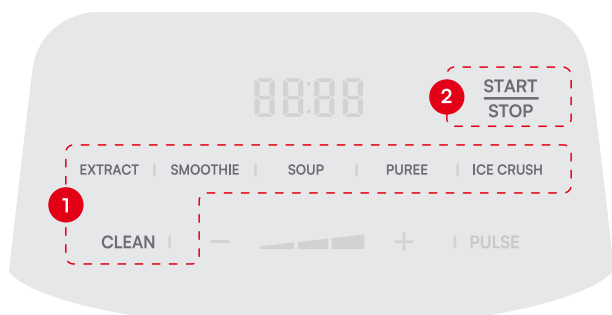 

7

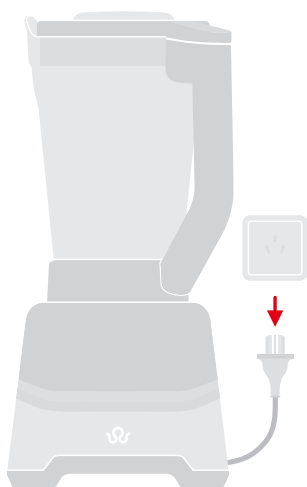 

8

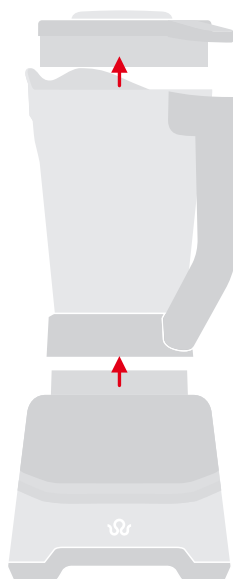 

USING YOUR BLENDER

Assembly

Before assembling, ensure the power cord is unplugged from the outlet. Place the jar onto the motor unit. Secure the jar lid and insert the measuring cup into the lid opening.

Program Modes

The blender has the following modes:

Mode	Description	Notes
Extract	Cycles through varied high speeds to break down fibrous fruits, vegetables, seeds, and stems into a smooth, nutrient-dense liquid.	Automatic.
Smoothie	Blends soft fruits, frozen ingredients, and ice into a thick, drinkable consistency.	Automatic.
Soup	Blends cooked or hot ingredients into smooth soups.	Automatic. Max capacity 1 L. Ingredients must not exceed 90°C.
Puree	Runs at a high, steady speed to produce a smooth, thick, creamy consistency — ideal for sauces, dips, and baby food.	Automatic.
Ice Crush	Crushes ice.	Automatic. Max 400 g. Ice must be no larger than 45 × 45 × 45 mm and frozen at -18°C or below.
Pulse	Blends at the highest speed for as long as the button is held. Release to stop.	Manual.
Clean	Runs an automatic cleaning cycle.	Automatic. See Cleaning and Maintenance.


To use a program mode:

- Add ingredients to the jar (see Recipes for guidance). Secure the jar lid and insert the measuring cup.
- Connect the power cord to the outlet. The control panel will light up.
- Press the button for the desired program mode.
- Press START/STOP to begin. The timer will count up during operation.
- When the cycle is complete, the blender will stop automatically.

To pause or stop a program at any time, press the program mode button or START/STOP.

Important

- The jar lid and measuring cup must be securely closed before blending.
- Stop the appliance before adding ingredients during blending.
- Never put your hands into the jar while the blender is powered on.
- Use caution when emptying hot contents from the jar.

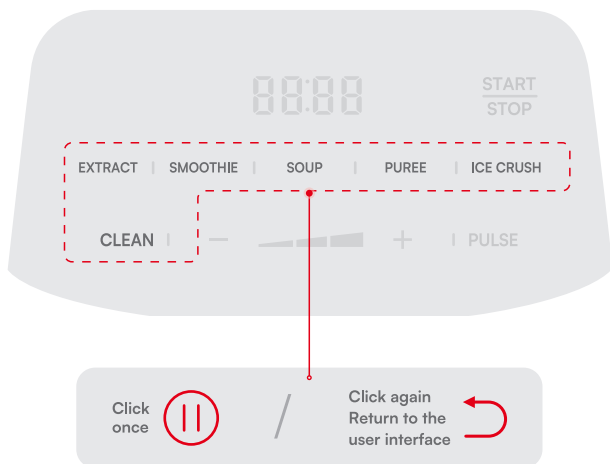

Manual Speed

Manual speed mode allows you to set a custom blending speed.

- Add ingredients to the jar. Secure the jar lid and insert the measuring cup.
- Connect the power cord to the outlet. The control panel will light up.
- Press the + or – button to set the desired speed. The speed setting is shown on the panel.
- Press START/STOP to begin.
- Press START/STOP again to stop when the desired result is reached.

NOTE: If the blender runs continuously for more than 3 minutes and 30 seconds, the motor will stop automatically and enter protection mode. Unplug the appliance and allow it to cool before restarting.

DISPOSAL



Do not dispose of the appliance with normal household waste at the end of its life. Instead, take it to an official collection point for recycling. By doing this, you help preserve the environment.

RECIPES

Recipe	Ingredient	Program	Time
Carrot Juice	Carrot: 800 g Water: 1200 g	Extract	1 min
Apple Juice	Apple: 300 g Water: 150 g Sugar: 15 g Lemon juice: 10 mL	Extract	1 min
Banana Smoothie	Milk: 650 g Banana: 350 g (cut into 2 pieces) Ice cubes 5 pcs (20 × 20 × 20 mm) White sugar: 15 g	Smoothie	—
Tomato Soup	Tomato: 750 g Red capsicum: 135 g Cashew nut: 90 g Basil leaves: 6 pcs Salt: 1 g Pepper: 0.5 g	Soup	—

CLEANING & MAINTENANCE

Auto Clean

- Add approximately 700 mL of water and 2 drops of cleaning agent to the jar. Secure the jar lid and insert the measuring cup.
- Connect the power cord to the outlet. The control panel will light up.
- Press the CLEAN button, then press START/STOP. The cleaning cycle will run automatically.
- When the cycle is complete, unplug the appliance. Remove the jar from the motor unit and rinse under running water.

Manual Cleaning

- After use, place the jar on the motor unit and pour approximately 400-500 mL of warm water into it. Run the appliance briefly, then unplug and rinse the jar under running water.
- Wipe the outer surface of the motor unit with a damp cloth. Do not use abrasive cleaners.
- Never immerse the motor unit in water or other liquids.
- All parts except the motor unit are dishwasher safe. Parts can also be washed in warm soapy water.
- Dry all parts before reassembling. Store the appliance with the jar lid slightly open to allow air circulation and prevent odours.

SPECIFICATIONS & FEATURES

- Model: BL9023-CB
- Spec Item: # 17104
- Input: 220-240V~, 50-60Hz
- Power: 1500W

WARRANTY & SERVICE

12 MONTH LIMITED WARRANTY

Statutory Rights

For Australian consumers, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand consumers, our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This warranty is in addition to and does not limit your statutory rights and remedies under New Zealand law.

Warranty Details

The warranty commences on the date of purchase and expires at the end of the 12-month period. If a defect arises due to faulty materials or workmanship during the warranty period, our remedy will depend on the nature of the failure. For failures that do not amount to a major failure, we will repair or replace the product at our discretion, free of charge. For major failures, you are entitled to choose a replacement or a refund. To make a claim, you must provide a proof of purchase showing the date and place of purchase.

Warranty Conditions

- The appliance has not been operated with a damaged plug or cord, and has not been dropped, damaged, or immersed in water.
- The product has not been misused, improperly handled, disassembled, modified or repaired by an unauthorised person.
- The product has not been used for trade, professional or hire purposes.

Customer Costs

For valid claims covered under this warranty and applicable consumer protection laws, we will bear or reimburse the reasonable freight costs associated with returning the product. However, if upon inspection the product is found to have user-induced damage or faults not covered by this warranty, you will be responsible for bearing all associated freight and transport costs.

Who is Covered

This voluntary warranty applies only to the original purchaser who purchased the product from an authorised retailer and is not transferable. Proof of purchase is required. However, this does not affect any statutory rights available to a person who receives the product as a gift under the Australian Consumer Law or the New Zealand Consumer Guarantees Act.

What is Not Covered

- Accessories supplied with the product.
- Components subject to normal wear and tear.

- Damage caused by misuse, improper handling, or unauthorised repair.
- Accidental damage.
- Damage caused by use not in accordance with instructions or the rating plate.
- Use of non-genuine Octopus parts or accessories.

How to Make a Warranty Claim

The quickest way to make a claim is to return the product, along with your proof of purchase, to the original place of purchase for a replacement or refund (where applicable).

Alternatively, you can contact us directly to make a claim under this warranty:

Australia:

Company Name: ZURU PTY LIMITED.

Business Address: Level 6, 500 Collins Street, Melbourne, VIC 3000, Australia.

Phone Number: 1800 324 892

New Zealand:

Company Name: ZURU NEW ZEALAND LIMITED.

Business Address: Level 4, Building A, 167 Victoria Street West, Auckland Central, Auckland, 1010, New Zealand.

Phone Number: 0800 587 055

Contact Us

hello@octopushome.com