



IONIC HAIR DRYER

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions carefully before use.
- Do not switch on before checking that the voltage on the rating plate matches the voltage of your electrical outlet.
- This appliance is intended for household use only.
- Switch off and unplug when not in use, even if only for a moment.
- Do not use the appliance when your hands are wet.
- Never submerge the appliance in water or any other liquid.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
- For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Do not use the appliance when the air inlets or outlets are blocked. If overheating occurs, the thermal temperature limiter will automatically shut off the appliance.
- When the appliance is in use, do not block the air inlet with a towel, clothing, or other objects.

WARNING - When the hair dryer is used in a bathroom, unplug it after use. The proximity of water presents a hazard even when the appliance is switched off.

WARNING - Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



WARRANTY & SERVICE

12 MONTH LIMITED WARRANTY

Statutory Rights

For Australian consumers, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand consumers, our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This warranty is in addition to and does not limit your statutory rights and remedies under New Zealand law.

Warranty Details

The warranty commences on the date of purchase and expires at the end of the 12-month period. If a defect arises due to faulty materials or workmanship during the warranty period, our remedy will depend on the nature of the failure. For failures that do not amount to a major failure, we will repair or replace the product at our discretion, free of charge. For major failures, you are entitled to choose a replacement or a refund. To make a claim, you must provide a proof of purchase showing the date and place of purchase.

Warranty Conditions

- The appliance has not been operated with a damaged plug or cord, and has not been dropped, damaged or exposed to water.
- The product has not been misused, improperly handled, disassembled, modified or repaired by an unauthorised person.
- The product has not been used for trade, professional or hire purposes.

Customer Costs

For valid claims covered under this warranty and applicable consumer protection laws, we will bear or reimburse the reasonable freight costs associated with returning the product. However, if upon inspection the product is found to have user-induced damage or faults not covered by this warranty, you will be responsible for bearing all associated freight and transport costs.

Who is Covered

This voluntary warranty applies only to the original purchaser who purchased the product from an authorised retailer and is not transferable. Proof of purchase is required. However, this does not affect any statutory rights available to a person who receives the product as a gift under the Australian Consumer Law or the New Zealand Consumer Guarantees Act.

What is Not Covered

- Accessories supplied with the product.
- Components subject to normal wear and tear.
- Damage caused by misuse, improper handling, or unauthorised repair.
- Accidental damage.
- Damage caused by use not in accordance with instructions or the rating plate.
- Use of non-genuine Octopus parts or accessories.

How to Make a Warranty Claim

The quickest way to make a claim is to return the product, along with your proof of purchase, to the original place of purchase for a replacement or refund (where applicable).

Alternatively, you can contact us directly to make a claim under this warranty:

Australia:

Company Name: ZURU PTY LIMITED.

Business Address: Level 6, 500 Collins Street, Melbourne, VIC 3000, Australia.

Phone Number: 1800 324 892

New Zealand:

Company Name: ZURU NEW ZEALAND LIMITED.

Business Address: Level 4, Building A, 167 Victoria Street West, Auckland Central, Auckland, 1010, New Zealand.

Phone Number: 0800 587 055

Contact Us

hello@octopushome.com

ION FUNCTION

 
When you use the hair dryer, negative ions are produced and released through the airflow. These help reduce static, smooth the hair cuticle, and retain moisture.

SPECIFICATIONS & FEATURES

- Model: RCY-292i
- Spec Item: # 17101
- Input: 220-240V~
- Power: 1350-1600W
- Frequency: 50-60Hz
- Brushless DC motor
- 2 speed and 4 heat settings
- Removable end cap and mesh filter for easy cleaning
- Includes 1 concentrator and 1 diffuser

 
 
 
 
CLEANING & MAINTENANCE

- Always disconnect the appliance from the power outlet before cleaning.
- Clean the appliance with a slightly damp cloth and dry with a dry cloth. Do not place the appliance in water.
- Regularly remove the end cap and clear any hair or dust from the mesh filter.

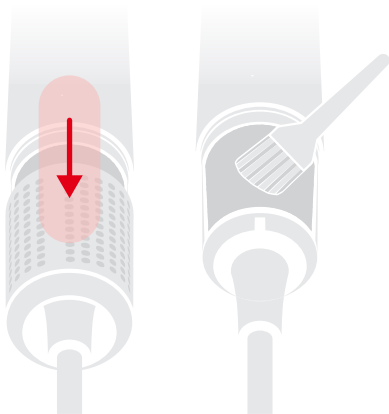







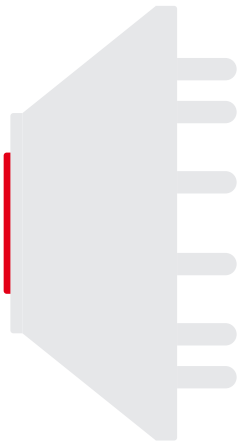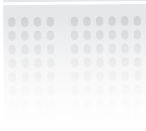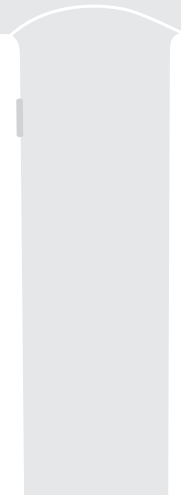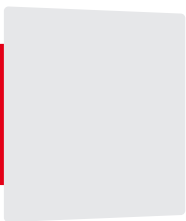

1



  2

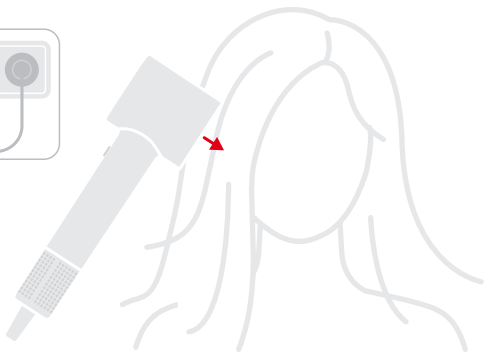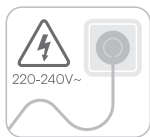

3

