 
 


POWER BANK
10,000mAh

 
1

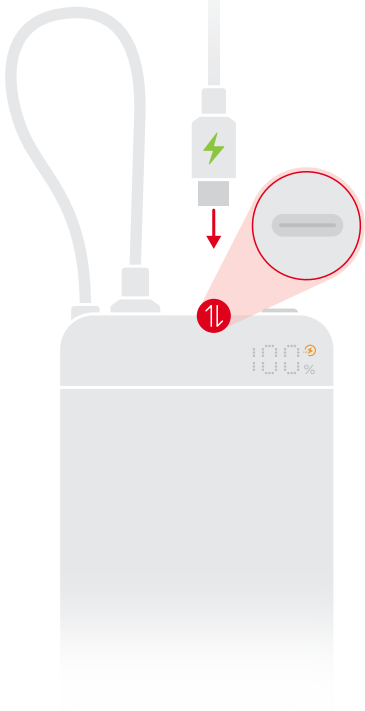

2

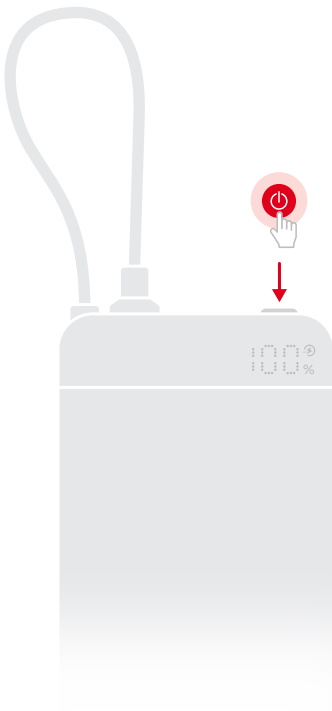

3

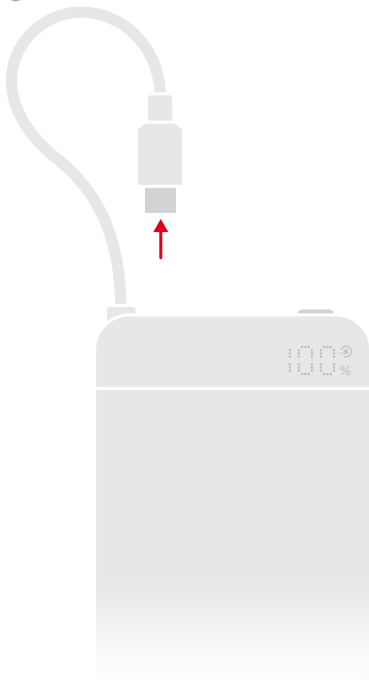

4



SPECIFICATIONS & FEATURES

Model	PB0610L
Spec Item	# 17111
Battery Type	Lithium polymer
Battery Capacity	3.85V / 10,000mAh / 38.5Wh
Rated Capacity	6000mAh (5V=3A)
USB-C Input	DC 5V=3A, 9V=2A, 12V=1.5A (18W Max)
USB-C Output	DC 5V=3A, 9V=2.22A, 10V=2.25A, 12V=1.67A (22.5W Max)
USB-C Cable Input	DC 5V=3A, 9V=2A, 12V=1.5A (18W Max)
USB-C Cable Output	DC 5V=3A, 9V=2.22A, 10V=2.25A, 12V=1.67A (22.5W Max)
Total Output	DC 5V=3A
Product Size	110x65x14.5 mm
Net Weight	190 g

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions carefully before use.
- This product is not a toy. Keep it out of the reach of children. Do not allow children to use or play with this product.
- Only charge this product with a charger that meets local safety standards or a certified power adaptor. Check device voltage for compatibility before use.
- Do not press, strike, drop, or subject this product to strong impact or vibration. Any mechanical impact may damage the battery's internal components.
- If the product is damaged, or if liquid enters the interior, stop using it immediately and dispose of it at an authorised recycling centre.
- Do not allow the product to come into contact with water or moisture.
- Do not charge or use this product in places that restrict heat dissipation, such as pockets, pillows, bedding, or other soft surfaces.
- Do not stack the product with other devices while charging.
- Do not store the product in small enclosed areas without ventilation.
- Do not disassemble, squeeze, puncture, or short-circuit this product.
- Do not expose this product to fire, heat sources, or environments with temperatures above 60°C.
- Do not store in extreme hot or cold conditions.
- Replacing the battery with an incorrect type may defeat built-in safeguards.

- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- If the product swells, deforms, leaks fluid, loses significant capacity, overheats, emits an odour, or shows any abnormal change, stop using it immediately.
- Only dispose of the battery at an authorised recycling centre.

CARE & STORAGE

- Do not use harsh chemicals or abrasive cleaning agents on the exterior.
- Wipe the surface with a soft, dry cloth.
- Store in a cool, dry, well-ventilated area away from direct sunlight and heat sources.

BEFORE USING FOR THE FIRST TIME

- Fully charge the power bank before first use.
- The battery requires 3-4 full charge and drain cycles before it reaches optimal performance.
- To ensure the best charging speed, use a 20W or higher charger (supporting 9V–2A or above). An Octopus charger and cable are recommended.

USING YOUR POWER BANK

Checking the Battery Level

Press the power button briefly. The LED indicator will show the current charge level.

Charging the Power Bank

- Connect a USB-C cable from a power source to the USB-C port, or connect the built-in USB-C cable to a power source.
- The LED indicator will show the charging progress.
- When fully charged, disconnect the power bank from the power source.
- Do not leave the power bank unattended while charging. Disconnect from the power source when leaving for an extended period.

Charging a Device

- Connect the device to the power bank using the built-in USB-C cable, or connect a USB-C cable from the USB-C port to the device.
- The power bank will begin charging the device automatically.

Battery Care

- If the product will not be used for an extended period, maintain the charge between 50% and 70% and store in a cool, dry place.
- Recharge every 2-3 months to prevent deep discharge, which may cause irreversible battery damage.
- Do not store the product for extended periods when fully charged or completely empty.

WARRANTY & SERVICE

12 MONTH LIMITED WARRANTY

Statutory Rights

For Australian consumers, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand consumers, our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This warranty is in addition to and does not limit your statutory rights and remedies under New Zealand law.

Warranty Details

The warranty commences on the date of purchase and expires at the end of the 12-month period.

If a defect arises due to faulty materials or workmanship during the warranty period, our remedy will depend on the nature of the failure.

For failures that do not amount to a major failure, we will repair or replace the product at our

discretion, free of charge. For major failures, you are entitled to choose a replacement or a refund.

To make a claim, you must provide a proof of purchase showing the date and place of purchase.

Warranty Conditions

- The appliance has not been operated with a damaged plug or cord, and has not been dropped, damaged or exposed to water.

- The product has not been misused, improperly handled, disassembled, modified or repaired by an unauthorised person.
- The product has not been used for trade, professional or hire purposes.

Customer Costs

For valid claims covered under this warranty and applicable consumer protection laws, we will bear or reimburse the reasonable freight costs associated with returning the product. However, if upon inspection the product is found to have user-induced damage or faults not covered by this warranty, you will be responsible for bearing all associated freight and transport costs.

Who is Covered

This voluntary warranty applies only to the original purchaser who purchased the product from an authorised retailer and is not transferable. Proof of purchase is required. However, this does not affect any statutory rights available to a person who receives the product as a gift under the Australian Consumer Law or the New Zealand Consumer Guarantees Act.

What is Not Covered

- Accessories supplied with the product.
- Components subject to normal wear and tear.
- Damage caused by misuse, improper handling, or unauthorised repair.
- Accidental damage.
- Damage caused by use not in accordance with instructions or the rating plate.
- Use of non-genuine Octopus parts or accessories.

How to Make a Warranty Claim

The quickest way to make a claim is to return the product, along with your proof of purchase, to the original place of purchase for a replacement or refund (where applicable).

Alternatively, you can contact us directly to make a claim under this warranty:

Australia:

Company Name: ZURU PTY LIMITED.

Business Address: Level 6, 500 Collins Street,
Melbourne, VIC 3000, Australia.

Phone Number: 1800 324 892

New Zealand:

Company Name: ZURU NEW ZEALAND LIMITED.

Business Address: Level 4, Building A, 167 Victoria
Street West, Auckland Central, Auckland, 1010,
New Zealand.

Phone Number: 0800 587 055

Contact Us

hello@octopushome.com

DISPOSAL

Do not dispose of the product with normal household waste at the end of its life. Instead, take it to an official collection point for recycling.

By doing this, you help preserve the environment.

