



**POWER BOARD
WITH USB CHARGING**

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- This power board is intended for indoor household use only. Do not use it outdoors or in wet or damp locations.
- Do not connect to an ungrounded outlet or to another power board. Do not use with extension cords.
- Do not exceed the maximum rated load of 2400W. Always use earth connections.
- Ensure the AC plug is accessible at all times so the power board can be quickly disconnected from the mains.
- Do not use the power board if the plug or supply cord is damaged. Have the cord replaced by appropriately qualified personnel only. Do not attempt to open the board or replace the cord yourself.
- Keep the power supply cord fully unwound and positioned to avoid tripping hazards.
- Do not operate the power board while the cord is folded or coiled.
- Do not immerse the power board, cord, or plug in water or other liquid. Do not expose electrical connections to moisture.
- Do not place near naked flame sources such as candles. Do not cover the power board when in use.
- Place away from heat sources, radiators, high humidity, direct sunlight, and excess dirt and dust.
- The terminal equipment connected to this power board should have a fireproof enclosure with a minimum rating of V-1.
- The bottom surface may become hot during extended use. Avoid prolonged contact with the bottom surface.

- This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning its use in a safe way and understand the hazards involved.
- Keep children away from this product at all times. Children should be supervised to ensure they do not play with the power board.
- This product is not user-serviceable. Do not disassemble, modify, or attempt to service it yourself. Contact After-Sales Support for any repair or damage needs.

CLEANING

- Clean only with a soft, dry cloth or brush.
- Do not use water, chemical cleaners, solvents, polish, wax, or detergent.
- Wipe off any moisture, dirt, or dust on the power sockets and plug pins with a clean, dry cloth.

STORAGE & TRANSPORT

- When not in use, disconnect from the power source and store in a cool, dry, well-ventilated location out of direct sunlight and away from humidity.
- Keep the original packaging in a safe place.
- Always use the original packaging when transporting to prevent damage.

WARRANTY & SERVICE

12 MONTH LIMITED WARRANTY

Statutory Rights

For Australian consumers, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand consumers, our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This warranty is in addition to and does not limit your statutory rights and remedies under New Zealand law.

Warranty Details

The warranty commences on the date of purchase and expires at the end of the 12-month period. If a defect arises due to faulty materials or workmanship during the warranty period, our remedy will depend on the nature of the failure. For failures that do not amount to a major failure, we will repair or replace the product at our discretion, free of charge. For major failures, you are entitled to choose a replacement or a refund. To make a claim, you must provide a proof of purchase showing the date and place of purchase.

Warranty Conditions

- The appliance has not been operated with a damaged plug or cord, and has not been dropped, damaged or exposed to water.
- The product has not been misused, improperly handled, disassembled, modified or repaired by an unauthorised person.
- The product has not been used for trade, professional or hire purposes.

Customer Costs

For valid claims covered under this warranty and applicable consumer protection laws, we will bear or reimburse the reasonable freight costs associated with returning the product. However, if upon inspection the product is found to have user-induced damage or faults not covered by this warranty, you will be responsible for bearing all associated freight and transport costs.

Who is Covered

This voluntary warranty applies only to the original purchaser who purchased the product from an authorised retailer and is not transferable. Proof of purchase is required. However, this does not affect any statutory rights available to a person who receives the product as a gift under the Australian Consumer Law or the New Zealand Consumer Guarantees Act.

What is Not Covered

- Accessories supplied with the product.
- Components subject to normal wear and tear.
- Damage caused by misuse, improper handling, or unauthorised repair.
- Accidental damage.
- Damage caused by use not in accordance with instructions or the rating plate.
- Use of non-genuine Octopus parts or accessories.

How to Make a Warranty Claim

The quickest way to make a claim is to return the product, along with your proof of purchase, to the original place of purchase for a replacement or refund (where applicable).

Alternatively, you can contact us directly to make a claim under this warranty:

Australia:

Company Name: ZURU PTY LIMITED.

Business Address: Level 6, 500 Collins Street,
Melbourne, VIC 3000, Australia.

Phone Number: 1800 324 892

New Zealand:

Company Name: ZURU NEW ZEALAND LIMITED.
Business Address: Level 4, Building A, 167 Victoria
Street West, Auckland Central, Auckland, 1010,
New Zealand.

Phone Number: 0800 587 055

Contact Us

hello@octopushome.com

SPECIFICATIONS & FEATURES

Model	LS-813
Spec Item	# 17110
AC Input	220-240V~, 50Hz, 10A, Max 2400W
USB-C1 / USB-C2 Output	DC 5V-3A, 9V-3A, 12V-2.91A, 15V-2.33A, 20V-1.75A, 3.3-11V-3.1A (35W Max)
USB-A1 / USB-A2 Output	DC 5V-3A, 9V-2A, 12V-1.5A (18W Max)
Total USB Output	DC 5V-3.6A (18W Max)
Dimensions (Main Body)	47x47x138 mm
Cable Length	1.6 m

DISPOSAL



Do not dispose of the product with normal household waste at the end of its life. Instead, take it to an official collection point for recycling. By doing this, you help preserve the environment.