

 
3-IN-1 MAGNETIC CHARGING STATION




*




1

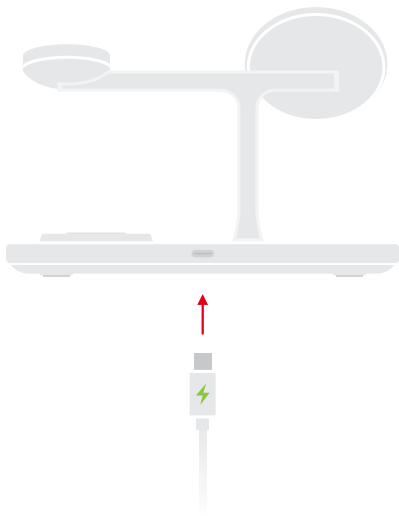

2

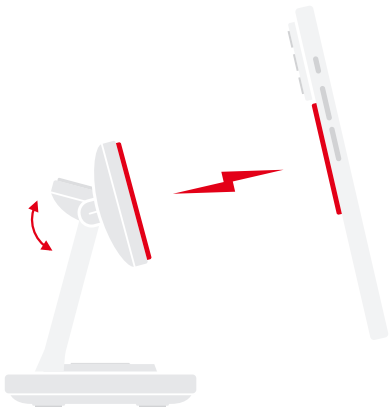 

3

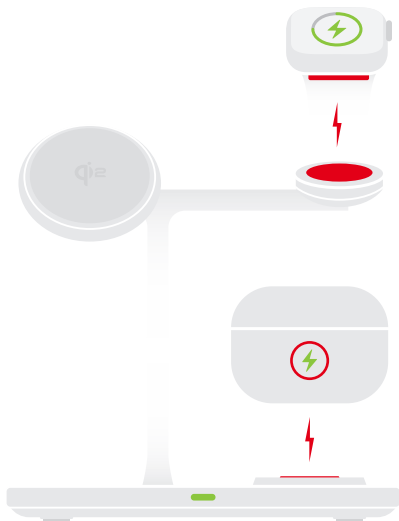 

SPECIFICATIONS & FEATURES

- Model: T255
- Spec item: # 17108
- Working frequency: 110-205 kHz
- Magnetic phone charger output: 5W / 7.5W / 10W / 15W Max
- Base output: 5W Max
- Watch output: 3W Max
- Input: 9V=3A / 12V=2.5A

POWER ADAPTER REQUIREMENTS

Input	Phone	Smart Watch	Wireless Earbuds
30W and Above	✓	✓	✓
27W	✓	✓	✗
20W	✓	✗	✗
18W	✗	✓	✓

To ensure all three devices charge simultaneously at optimal speeds, a USB-C power adapter of 30W or higher is required.

★ Use the anti-slip pads on the watch charger surface if the watch rotates. It will not affect charging performance.

LED LIGHT GUIDE

Status	LED Indicator
Connected to power	Green Light for 3 Seconds Then Red Light
Charging (AirPods)	Green Light
Charging (Phone/Watch)	Red Light
Metal object detected while charging	Slow Flashing

PRODUCT INTRODUCTION

Compatible Devices



iPhone 12 or later with MagSafe
Google Pixel 10 Series or later with MagSafe
Qi-enabled Android phones with a MagSafe-compatible case



Apple Watch Series 4 and later
Samsung Galaxy Watch Active and later



AirPods (with Wireless Charging Case)

ATTENTION

- If you use a pacemaker, consult your doctor before using this product. Keep the charger at least 50 cm away from your pacemaker, as electromagnetic waves may interfere with its operation.
- Do not charge in high-temperature or humid environments to avoid circuit damage.
- Do not place magnetic cards, magnetic tape media, or precision instruments too close to this product.

WARRANTY & SERVICE

12 MONTH LIMITED WARRANTY

Statutory Rights

For Australian consumers, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand consumers, our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This warranty is in addition to and does not limit your statutory rights and remedies under New Zealand law.

Warranty Details

The warranty commences on the date of purchase and expires at the end of the 12-month period. If a defect arises due to faulty materials or workmanship during the warranty period, our remedy will depend on the nature of the failure. For failures that do not amount to a major failure, we will repair or replace the product at our discretion, free of charge. For major failures, you are entitled to choose a replacement or a refund. To make a claim, you must provide a proof of purchase showing the date and place of purchase.

Warranty Conditions

- The appliance has not been operated with a damaged plug or cord, and has not been dropped, damaged or exposed to water.
- The product has not been misused, improperly handled, disassembled, modified or repaired by an unauthorised person.
- The product has not been used for trade, professional or hire purposes.

Customer Costs

For valid claims covered under this warranty and applicable consumer protection laws, we will bear or reimburse the reasonable freight costs associated with returning the product. However, if upon inspection the product is found to have user-induced damage or faults not covered by this warranty, you will be responsible for bearing all associated freight and transport costs.

Who is Covered

This voluntary warranty applies only to the original purchaser who purchased the product from an authorised retailer and is not transferable. Proof of purchase is required. However, this does not affect any statutory rights available to a person who receives the product as a gift under the Australian Consumer Law or the New Zealand Consumer Guarantees Act.

What is Not Covered

- Accessories supplied with the product.
- Components subject to normal wear and tear.
- Damage caused by misuse, improper handling, or unauthorised repair.
- Accidental damage.
- Damage caused by use not in accordance with instructions or the rating plate.
- Use of non-genuine Octopus parts or accessories.

How to Make a Warranty Claim

The quickest way to make a claim is to return the product, along with your proof of purchase, to the original place of purchase for a replacement or refund (where applicable).

Alternatively, you can contact us directly to make a claim under this warranty:

Australia:

Company Name: ZURU PTY LIMITED.

Business Address: Level 6, 500 Collins Street, Melbourne, VIC 3000, Australia.

Phone Number: 1800 324 892

New Zealand:

Company Name: ZURU NEW ZEALAND LIMITED.

Business Address: Level 4, Building A, 167 Victoria Street West, Auckland Central, Auckland, 1010, New Zealand.

Phone Number: 0800 587 055

Contact Us

hello@octopushome.com



Qi-ID 27106

The Qi2 logo is a
trademark of the Wireless
Power Consortium.